F850 USER MANUAL

MP3 PLAYER / FM TUNER

Thank you for purchasing our product.
Please read this manual carefully before use.

Beijing Huaqi Information Digital Technology Co.,Ltd
www.aigo.com

Downloaded from www.Manualslib.com manuals search engine

CONTENT

NOTICE **4**

UNIQUE FEATURES **4**

CONTROLS **5**

GENERAL VIEW 5
FUNCTION OF BUTTON/INTERFACE 5
LCD DISPLAY 6
BATTERY INDICATOR 6
CHARGE NOTICE 6
SPACE REMINDER 6

BASIC OPERATION **7**

POWER ON/POWER OFF ..... **ERROR! BOOKMARK NOT DEFINED.**
POWER ON/POWER OFF 7
SYSTEM DIRECTORY 7
SYSTEM MODE 7
MODE SWITCH 7
SETUP/QUIT THE MENU 7
INTALL THE SOFTWARE ON PC 8
STARTUP ANIMATION DIY 9

PARTICULAR OPERATION **10**

1 MUSIC MODE 10
1.1 THE LCD DISPLAY *10*
1.2 VOLUME CONTROL *10*
1.3 PAUSE/PLAY *11*
1.4 MUSIC FILES SELECTION *11*
1.5 QUICK FORWARD / BACKWARD *11*
1.6 EQ SETTING *11*
1.7 TIME DISPLAY SETTING *12*
1.8 CYCLE SETTING *12*
1.9 SPEED SETTING *12*
1.10 INDEX SETTING *12*
1.12 DELETE FILE *13*
1.13 MARK A-B *13*
2 FM DIGITAL RADIO 17
2.1 LCD DISPLAY *17*
2.2. SEARCH MODE SETTING *17*
2.3 MUTE MODE *19*
2.4 NOISE AVOID SETTING *19*
2.5 FM MP3 ENCODING *19*
3 VOICE 21

Downloaded from www.Manualslib.com manuals search engine

3.1 LCD DISPLAY *21*
3.2 VOICE FILE SELECT *21*
3.3 TIME DISPLAY SETTING *21*
3.4 CYCLE SETTING *21*
3.5 INDEX SETTING *21*
3.6 LYRIC DISPLAY *22*
3.7 DELETE THE PLAYING FILE *22*
3.8 MARK A-B *22*
3.10 DIGITAL VOICE RECORD *22*
3.11 START *22*
3.11 STOP *22*
3.13 VOICE RECORD SETTING *22*
4 SYSTEM 22
4.1 LCD DISPLAY *22*
4.2 REVIEW THE FILES *22*
4.3 FILE DELETE *23*
4.4 SCREEN SAVER SETTING *23*
4.5 TIME SHUT-DOWN SETTING *23*
4.6 CONTRAST *24*
4.7 LANGUAGE *24*
4.8 VERSION *24*
4.9 SN *24*
4.10 UPGRADE *25*
4.11 FORMAT *25*
4.12 DEFAULTS *25*
SAFTY **25**
TROUBLE SHOOTING **26**
SPECIFICATION **26**
GUARANTEE REGULATIONS ..... ERROR! BOOKMARK NOT DEFINED.

Downloaded from www.Manualslib.com manuals search engine

NOTICE

High quality digital audio files can be copied using this product. Please use this function if local law permits.
Our company may modify, update, and replace our products without prior notice.

UNIQUE FEATURES

- Unique Design

- Multi-Codec Player
  Supports MP3 and WMA formats.

- Digital FM radio and FM encoding
  FM radio mode provides a frequency range from 76Mhz to 108Mhz. It is able to record the currently playing program into digital audio files and save them into the the player's memory as you listen to the radio.

- High quality voice recording
  You can make high quality voice recordings by setting the appropriate sensitivity and quality.

- Moving disk
  Supports the USB mass storage protocol and can be used as a moving disk.

- DIY Animation

  The player provides an CD to install the graphics software for startup. You can use this to make animations for your MP3 player.

Downloaded from www.Manualslib.com manuals search engine

CONTROLS

GENERAL OVERVIEW

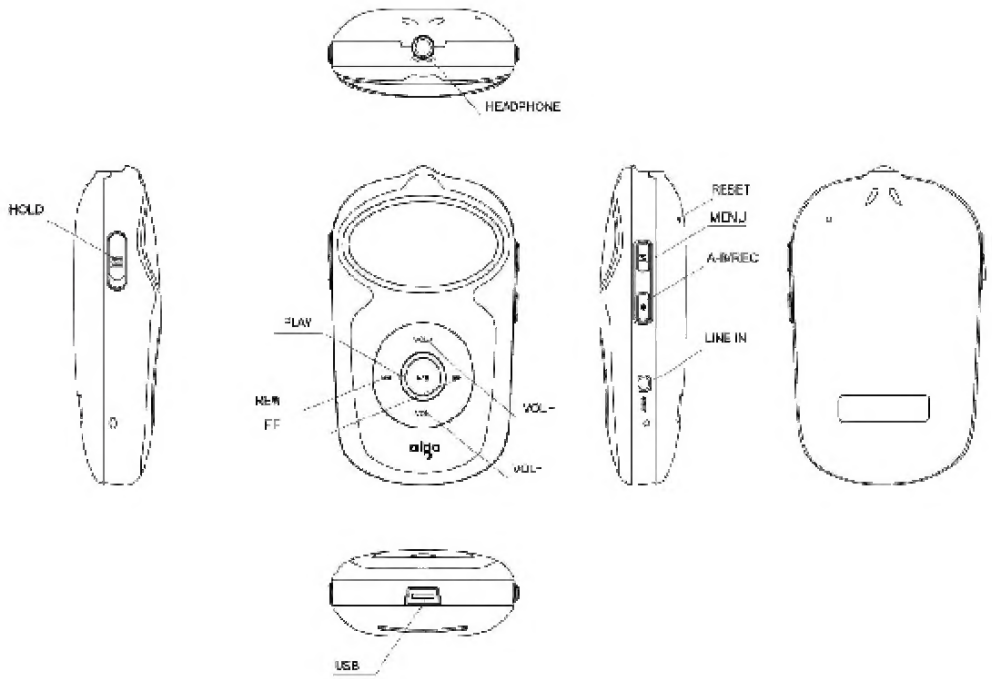

BUTTON/INTERFACE FUNCTIONS

PLAY	PLAY	E Press and hold to turn on or off. E To confirm a selection E To shift between play and pause
REC	AB/REC	E Press and hold to start recording. E To perform A-B repeat.
HEADPHONE		Earphone output
MIC		Microphone
USB		USB connection interface/charger input
VOL＋/VOL－	VOL+ VOL-	E To increase / decrease volume. E Enter / Exit the folder in SYS mode.
FF / REW	FF/REW	E Press once to perform the menu function. E Press to select the previous / next file in MUSIC/VOICE, or station for the radio.

Downloaded from www.Manualslib.com manuals search engine

		E	Press and hold to Fast forward/Rewind while playing music or voice files.
MENU	MENU	E E	Press and hold to activate a selected mode, among MUSIC/FM/VOICE//SYS. Press to Enter/Exit the menu
HOLD	HOLD	E	To put the system on hold.
RESET	○	E	Restart

LCD DISPLAY

1、Volume
2、Shut-off time icon
3、Cycle order
4、EQ icon
5、Battery icon
6、File name
7、Play time display
8、Playing time bar
9、Mode
10、Play/Pause/Hold icon
11、Current song /Total number of songs

BATTERY INDICATOR

Indicates 3 conditions: Full, middle, Low.

CHARGE NOTICE

When battery icon is changed into low, the player displays:

SPACE REMINDER

When memory is full, the player displays:

Downloaded from www.Manualslib.com manuals search engine

BASIC OPERATION

TURN ON/OFF

TURN ON/OFF

Press PLAY and hold to turn the player on. To turn it off, do the same.

Note:

1 The system will automatically save the current state and settings when the player is turned off, and will resume the saved state the next time the player is turned on.

2 The system will automatically shut off if it is idle for 1 minute.

SYSTEM DIRECTORY

VOICE folder: Only MP3 files are played under the VOICE folder.

Note:

The MP3 files from line-in or FM encode will be saved under the boot folder，MP3 files from microphone recordings will be saved under the VOICE folder.

SYSTEM MODE

MODE	FUNCTION
MUSIC	Play music files
FM	Listen to the radio / FM record
VOICE	Play / record voice files
SYSTEM	System files/settings management

MODE SWITCH

Press down MENU to switch among four modes.

SETUP/QUIT THE MENU

EXP: EQ setting in the MP3 mode

Step 1: After pressing MENU, the menu list will be shown in the lower area of LCD; dial left/right FF/REW to search through each menu . Find the EQ option.

Step 2: Press PLAY to confirm the EQ option，and the EQ option list will appear in the lower portion of the LCD，you can dial left/right ⏮ MODE ⏭ to search for POP in the EQ option.

Downloaded from www.Manualslib.com manuals search engine

Step 3: Press PLAY to confirm the pop option.

Attention:the icon has changed

The sound effect will be pop while playing music, and the pop icon will be shown in the LCD window.

Quit the menu: press down MENU to quit menu function.

INTALLING THE SOFTWARE ON YOUR PC

Supports USB mass storage protocol.

If you are running Windows 98 se/2000/ME/NT/XP, Mac OS 9.X, Linux 2.4.X, this player will be recognized by the PC automatically and installation of any communication software is unnecessary.

Installing the mass storage protocol under Windows 98 :

1. Insert the installation CD into the CD-ROM drive.
2. Connect the player to your PC using the USB cable.
3. Click "Next".

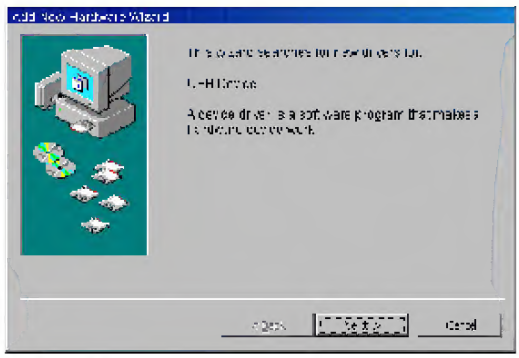

Click "Next"

Downloaded from www.Manualslib.com manuals search engine

Click "Next"

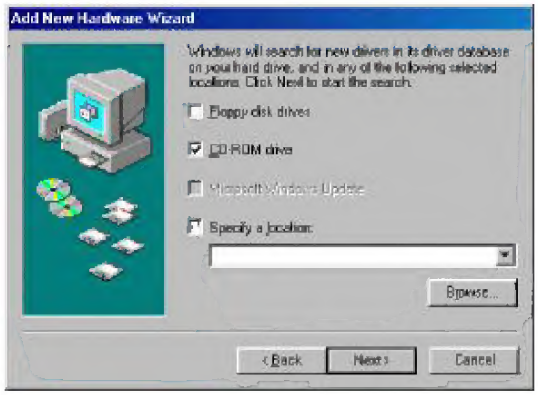
Add New Hardware Wizard
Windows will search for new drivers in its driver database on your hard drive, and in any of the following selected locations. Click Next to start the search.
Floppy disk drives
CD-ROM drive
Specify a location:
Browse...
< Back
Next >
Cancel

Continue to click "Next" the installation is finished

After you're done with the installation, you will find a new moving disk on your PC. You can copy and/or move files between the player and the PC.

NOTE:

When you want to transfer files from your computer, use the USB cord. Do not pull out the player while there are files in the process of being transmitted; this may cause damage to existing files in the player. The picture on the right shows an incorrect method.

The correct method of disconnecting the USB cord : Left click the Safely Remove Hardware icon. A window will pop up, click "stop USB Mass Storage Device". When a window pops up saying it's safe to remove hardware, you may disconnect the USB cord.

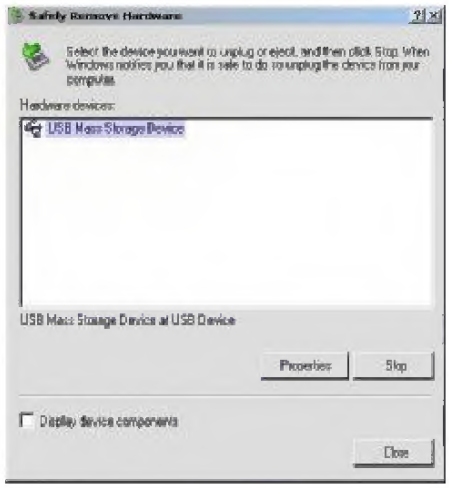
Safely Remove Hardware
Select the device you want to unplug or eject, and then click Stop. When Windows notifies you that it is safe to do so, unplug the device from your computer.
Hardware devices:
USB Mass Storage Device
USB Mass Storage Device at USB Device
Properties
Stop
Display device components
Close

STARTUP ANIMATION DIY

You can use Flash graphic software tool "GixEdit", to make startup animations for your MP3 player.

*Note : When saving the animation, it must be saved in the ROOT folder of your MP3

Downloaded from www.Manualslib.com manuals search engine

player. Also, modify the file name as "splash.gix".

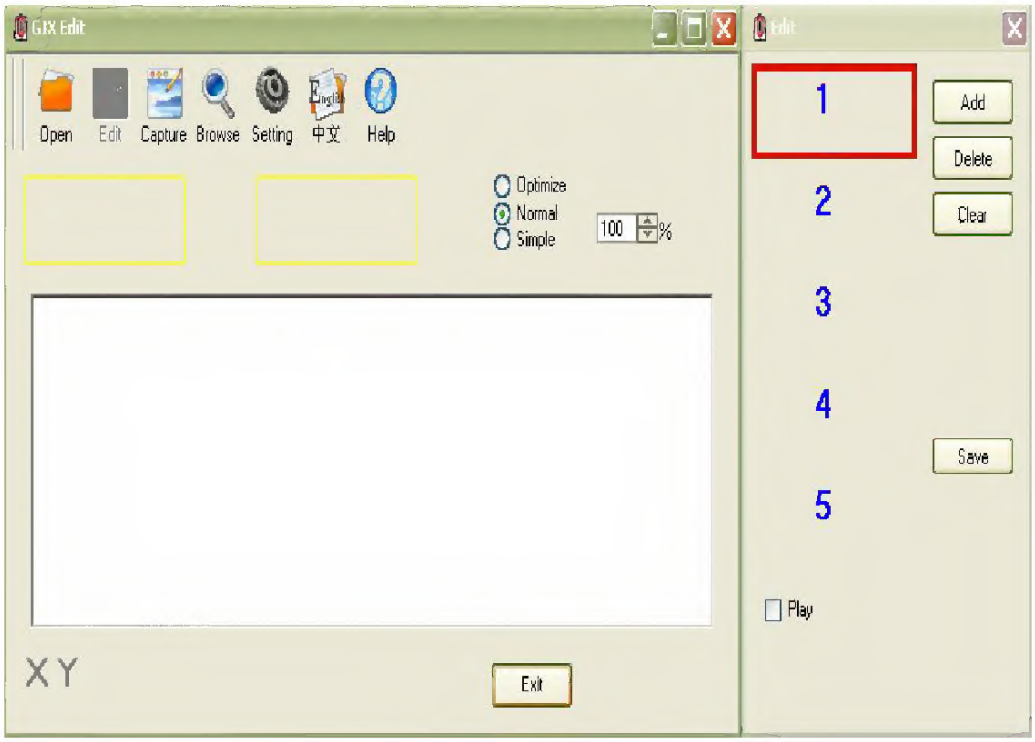

PARTICULAR OPERATIONS

1 MUSIC MODE

1.1 THE LCD DISPLAY

E 1、Volume
E 2、Shut-off time icon
E 3、Cycle order
E 4、EQ icon
E 5、Battery icon
E 6、File name
E 7、Play time display
E 8、Playing time bar
E 9、Mode
E 10、Play/Pause/Hold icon
11、Current song /Total number of songs

1.2 VOLUME CONTROL

Press to control the playing volume.

Downloaded from www.Manualslib.com manuals search engine

1. 3 PAUSE/ PLAY

When playing music, press PLAY to play/pause.

1. 4 MUSI C FI LES SELECTI ON

Press FF/REW to choose the next or last music file.

1. 5 FAST FORWARD / REW ND

Dial left/right FF/REW and hold to fast forward/rewind

1.6 EQ SETTI NG

一般設置音效：

Step 1: Press down MENU to enter the menu selection.

Step 2: Press PLAY to select the "EQ" option

Step 3: Press PLAY to select the EQ mode you prefer.

用戶自定義設置音效：

Step 1: Press MENU to enter the menu selection.

Step 2: Press PLAY to select the "EQ" option

Step 3: Press PLAY to select the EQ mode you prefer

Step 4:Dial left/right FF/REW to select the band.

Step 5:Press VOL+ VOL-, to turn DB.

Step 6:Press PLAY to confirm the EQ setting.

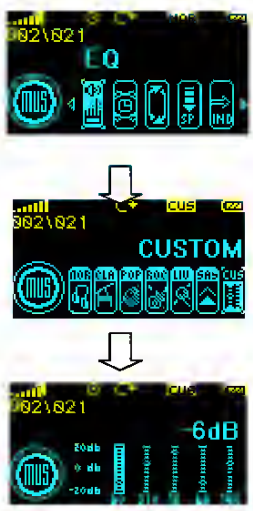

There are seven options to choose from : Normal/POP/Rock/Live/Classic/Sasha/Custom

.

Downloaded from www.Manualslib.com manuals search engine

1.7 TIME DISPLAY SETTING

Step 1: Press down MENU to enter the menu selection.

Step 2: Press PLAY to select the "TIME" option.

Step 3: Press PLAY to select the time display mode you prefer.

There are three options to choose from : SEQUENCE（default）, REVERSE , NONE.

1.8 CYCLE SETTING

Step 1: Press down MENU to enter the menu selection

Step 2: Press PLAY to select the "CYCLE" option

Step 3: Press PLAY to select the cycle functions you prefer.

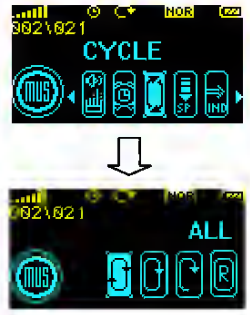

There are three options to choose from: ALL (default)/ONE/NONE/RANDOM.

1.9 SPEED SETTING

Step 1: Press MENU to enter the menu selection

Step 2: Press PLAY to select the "SPEED" option

Step 3: Press PLAY to select the speed you prefer.

There are four options to choose from: NORMAL (default), FAST, SLOW1, SLOW2.

1.10 INDEX SETTING

This operation can quickly help you find the music you want to hear. If the index function is selected, the player will play the beginning 10s of each song.

1.10.1 START

Step 1: Press MENU to enter the menu selection.

Downloaded from www.Manualslib.com manuals search engine

Step 2: Press PLAY to select the " INDEX " option.

1.10.2 QUIT

Press PLAY to play the song normally.

1. 11 LYRI C

Step 1: Press MENU to enter the menu selection.

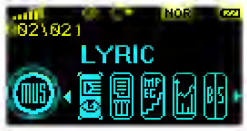

Step 2: Press PLAY to select the " LYRIC " option.

To show lyrics :

1, Please create an " *.lrc" lyrics file
2, Identically name the song and lyrics file;
3, Save these files in the same folder ;
4, Turn on the "lyrics show" function to see the lyrics..

1. 12 DELETI NG FI LES

Step 1: Press MENU to enter the menu selection.

Step 2: Press PLAY to SELECT the "DELETE" option.

Note: This operation will delete the current song.

1. 13 MARK A- B

The Mark A-B operation lets the user select a specific time frame within a song that will be played repeatedly.

1.13.1 START

While playing music, Press A-MRKD AD/RCC to start THE MARK A-B function .

Step 1: While playing music, Press A-MRKD AD/RCC for the first time to confirm point A.

Downloaded from www.Manualslib.com manuals search engine

Notice the blinking "A-" icon

Picture 1 : point A setting

Step 2:Pressing ADJ/REC for the second time will confirm point B, the end of the repeated section.

Picture 2 : point B setting

Step 3: The player will automatically begin to repeat the selected section

1.13.2 QUIT

Press PLAY to quit the Mark A-B function and resume the normal playing state.

1.14 MP3 LINE IN RECORDING

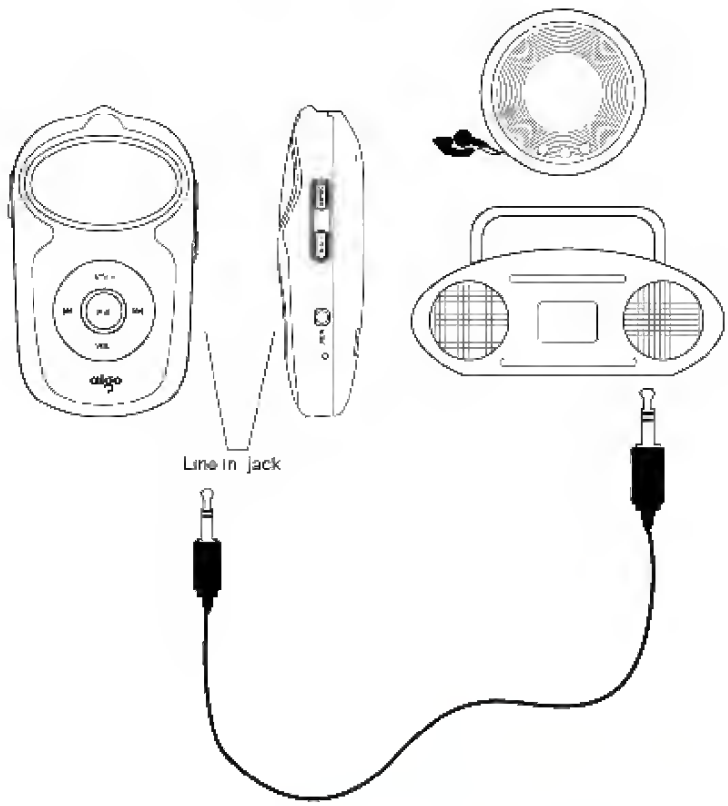

Step 1: Connect the cable of the sound source into the player

Step 2: Begin playing the sound source.

Step 3: Press ADJ/REC and hold to enter the music recode mode and start recording, the picture on the right will be shown on the LCD screen.

Downloaded from www.Manualslib.com manuals search engine

Step 4: Press PLAY to stop recording

Note:

While recording, please ensure that the volume is high enough. In most cases, the higher the volume is, the better the sound quality will be.

1.14.1 LINE IN SETTING

1.14.1.1 MPEG SETTING

Step 1: Press MENU to enter the menu selection.

Step 2: Press PLAY to select the "MPEG SETTING" option.

Step 3: Press PLAY to select the desired MPEG.

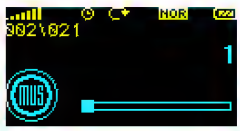

There are three options to choose from: MPEG-1(default), MPEG-2, MPEG-2.5

1.14.1.2 SAMPLE RATE SETTING

Step 1: Press MENU to enter the menu selection.

Step 2: Press PLAY to select the "SAMPLE RATE" option.

Step 3: Press PLAY to select the desired sample rate.

Note:

1. According to the different MPEG mode you select, the sample rate will vary.
   If you selected MPEG-1, options are as follows: 32, 44.1, 48
   If you selected MPEG-2, options are as follows: 16, 22.05, 24
   If you selected MPEG-2.5, options are as follows: 8
2. The higher the MPEG value selected, the better the recording effect.

1.14.1.3 BIT RATE SETTING

Step 1: Press MENU to enter the menu selection.

Step 2: Press PLAY to select the "BIT RATE" option.

Downloaded from www.Manualslib.com manuals search engine

Step 3: Press PLAY to select the desired bit rate.

Note:

1, According to the different of MPEG mode you selected, the choice of bit rate will be different.

If you selected MPEG-1, options are as follows: 32, 40, 48, 56, 64, 80, 96, 112, 128, 160, 192, 224, 256

If you selected MPEG-2, options are as follows: 16, 24, 32, 40, 48, 56, 64, 80, 96, 112, 128,144, 160

If you selected MPEG-2.5, options are as follows: 8

2. The higher the value selected, the better the recording effect.

1.14.1.4 SILENCE SETTING

Step 1: Press MENU to enter the menu selection.

Step 2: Press PLAY to select the "SILENCE" option.

Step 3: Press PLAY to select the option

Note:

1. There are three options to choose from: LOW (default), MID, HIGH .
2. The operation influences the result of VAD. The higher the level you select, the higher the sensitivity will be.

1.14.1.5 SYNCHRONIZING SETTING

Step 1: Press MENU to enter the menu selection.

Step 2: Press PLAY to select the "SYN SETTING" option.

Step 3: Press PLAY to select the option.

Note:

1, There are two options to choose from: ON (default)/ OFF

1、When the synchronizing setting is ON, the system will automatically go to the next file if it can't detect an audio signal.

Downloaded from www.Manualslib.com manuals search engine

1.14.1.6 VAD SETTING

Step 1: Press MENU to enter the menu selection.

Step 2: Press PLAY to select the "VAD SETTING" option.

Step 3: Press PLAY to select the option.

Note:

1、There are two options to choose from: ON (default) / OFF.

2、The operation decides whether or not to pause the line-in recording if the system can't detect an audio signal.

3、The operation will have no effect if you select "ON" in SYNC option.

2 FM DIGITAL RADIO

The FM radio mode provides an FM frequency of 76Mhz to 108Mhz FM

The player can preset many FM stations and has an automatic scan function.

2. 1 LCD DI SPLAY

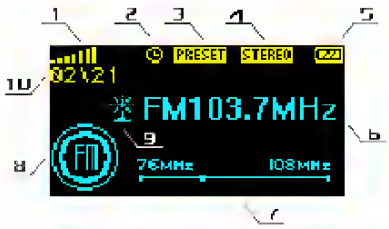

1、Volume

2、Shut-off time setting icon

3、FM search mode

4、stereo icon or mono icon

5、Battery

6、Station frequency

7、Station frequency bar

8、FM icon

9、FM Radio icon

10、Current Station /The total number of stations

2. 2. SEARCH MODE SETTI NG

There are two kinds of FM station searching modes: PRESET mode and TUNING mode.

2.2.1 SWITCH BETWEEN PRESET AND TUNING MODE

Under TUNING mode

Step 1: Press MENU to enter the menu selection.

Step 2: Press PLAY to select the "PRESET" option.

Downloaded from www.Manualslib.com manuals search engine

Under PRESET mode

Step 1: Press MENU to enter the menu selection.

Step 2: Press PLAY to select the "TUNING" option.

2.2.2 AUTO SCAN

Step 1: Press MENU to enter the menu selection under the PRESET / TUNING mode.

Step 2: Press PLAY to select the "AUTO SCAN " option.

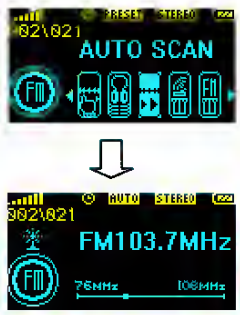

The MP3 player can save any FM station you find as a preset, and will give it a series number.

Note:

The earphons also function as an antenna. Please use the earphones when searching for stations.

2.2.3 Selecting FM Stations

Dial left/right FF/REW to select the next / previous FM station in the PRESET mode.

2.2.4 FM STATION DELETE

Step 1: Press MENU to enter the menu selection under the PRESET mode.

Step 2: Press PLAY to select the "DELETE " option.

Note: After deleting a preset radio station, the player will automatically renumber the remaining stations.

Downloaded from www.Manualslib.com manuals search engine

2.2.5 DELETING ALL PRESET STATIONS

Step 1: Press MENU to enter the menu selection under the PRESET mode.

Step 2: Press PLAY to select the "DELETE ALL" option.

2.2.6 MANUAL SETTING

Step 1: Under TUNING mode, Dial FF/REW left/right to change the radio frequency by 0.1Mhz.

Step 2: Press A-B/REC to save a radio frequency.

Notice: The earphons also function as an antenna. Please use the earphones when searching for stations.

2. 3 MUTE MODE

While playing, press PLAY to enter the mute mode; press again to exit.

2. 4 NOI SE AVOI DANCE SETTI NG

While listening to the FM radio, the user can use this function to dispel any noise.

Step 1: Press MENU to enter the menu selection.

Step 2: Press PLAY to select the "STEREO" option.

Step 3: Press PLAY to select the "OFF" option.

Note: when the noise avoidance function starts, the stereo mode will be turned off.

2. 5 FM MP3 ENCODI NG

When you are listening to the radio, press A-B/REC and hold to start the FM mp3 encoding,

Press PLAY to stop the encoding.

The files recorded will be saved in MP3 format in the system directory MUSIC.

Downloaded from www.Manualslib.com manuals search engine

2.5.1 START

When the radio is playing, press AD/REC and hold to start the FM mp3 encoding.

2.5.2 STOP

Press PLAY to stop while recording.

Note:

1、The files recorded will be saved with the name " FM_X. MP3 " in the system root directory.

2、When encoding, the system maybe find that memory is insufficient and will display "No SPACE" on the LCD screen. At this time, the encoding operation will be stopped.

2.5.3 FM ENCODING SETTING

2.5.3.1 MPEG SETTING

Step 1: Press MENU to enter the menu selection.

Step 2: Press PLAY to select the "MPEG SETTING" option.

Step 3: Press PLAY to select the MPEG mode.

There are three options to choose from: MPEG-1(default), MPEG-2, MPEG-2.5

2.5.3.2 SAMPLE RATE SETTING

Step 1: Press MENU to enter the menu selection.

Step 2: Press PLAY to select the "SAMPLE RATE" option.

Step 3: Press PLAY to select the sample rate.

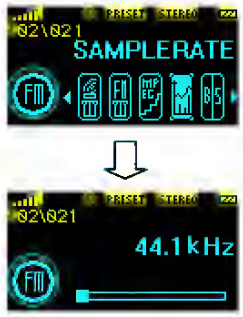

Note:

1. According to the different MPEG mode you select, the sample rate will vary.
   If you selected MPEG-1, options are as follows: 32, 44.1, 48
   If you selected MPEG-2, options are as follows: 16, 22.05, 24
   If you selected MPEG-2.5, options are as follows: 8

2. The higher the MPEG value selected, the better the recording effect.

Downloaded from www.Manualslib.com manuals search engine

2.5.3.3 BIT RATE SETTING

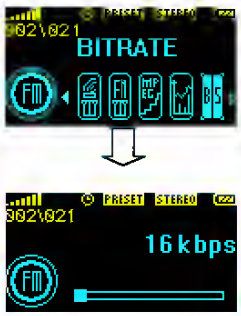

Step 1: Press MENU to enter the menu selection.

Step 2: Press PLAY to select the "BIT RATE" option.

Step 3: Press PLAY to select the bit rate.

Note:

1, According to the different of MPEG mode you selected, the choice of bit rate will be different.

If you selected MPEG-1, options are as follows: 32, 40, 48, 56, 64, 80, 96, 112, 128, 160, 192, 224, 256

If you selected MPEG-2, options are as follows: 16, 24, 32, 40, 48, 56, 64, 80, 96, 112, 128,144, 160

If you selected MPEG-2.5, options are as follows: 8

2. The higher the value selected, the better the recording effect

3 VOICE

3.1 LCD DISPLAY

1、Volume
2、Shut-off time icon
3、Cycle order
4、Battery icon
5、File name
6、Play/record time display
7、Playing time bar
8、Mode
9、Play/Pause/Hold icon
10、Current song /Total number of songs

3.2 VOICE FILE SELECTION

Dial left/right FF/REW to choose the next/previous voice file.

3.3 TIME DISPLAY SETTING

Please refer to operation 1.7 in MP3 mode.

3.4 CYCLE SETTING

Please refer to operation 1.8 in MP3 mode.

3.5 INDEX SETTING

Please refer to operation 1.10 in MP3 mode.

Downloaded from www.Manualslib.com manuals search engine

3.6 LYRIC DISPLAY

Please refer to operation 1.11 in MP3 mode.

3.7 DELETE THE PLAYING FILE

Please refer to operation 1.12 in MP3 mode.

3.8 MARK A-B

Please refer to operation 1.13 in MP3 mode.

3.10 DIGITAL VOICE RECORD

This player offers high quality digital recording. The internal microphone can be used to record voice. The files recorded will be saved in MP3 format in the system directory VOICE.

3.11 START

When you are ready to record, press A-B/REC and hold to begin recording.

3.11 STOP

Press PLAY to stop recording.

Note:

1. The files recorded will be saved as "VOICE_X.MP3" in the system directory VOICE.
2. When encoding, the system maybe find that there isn't sufficient memory, and the LCD screen will display "No SPACE". At this time, the encoding operation will be stopped.

3.13 VOICE RECORD SETTING

The operations in VOICE mode are the same as those in FM mode. Please consult、operation 2.5.3.

4 SYSTEM

4.1 LCD DISPLAY

1、Volume
2、Shut-off time setting icon
3、Battery
4、File name
5、File capacity
6、Free space
7、SYS icon
8、File/Folder icon
9、Current file number/Total Files.

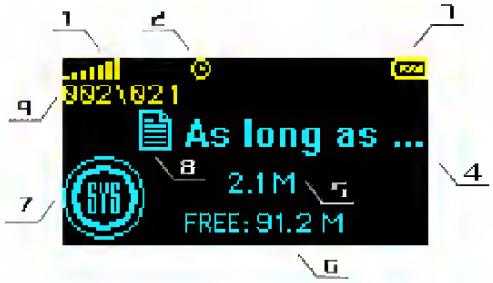

4.2 REVIEW YOUR FILES

In management mode, press FF/REW key to review all your files. The file icon "📁" indicates a folder, the file icon 📄 indicates a file, and users can press VOL+ VOL- to

Downloaded from www.Manualslib.com manuals search engine

enter or exit the folder.

4. 3 DELETI NG FI LES

Step 1: Press MENU to enter the menu selection.

Step 2: Press PLAY to select the "DELETE" option.

4. 4 SCREEN SAVER SETTI NG

Step 1: Press MENU to enter the menu selection.

Step 2: Press PLAY to select the "SCR SAVER" option.

Step 3: Select the screen saver display time.

There are 3 levels to choose from.

10S （shuts off after 10 seconds）

30S (shuts off after 30 seconds)

OFF (Cancel screen saver)

4. 5 TI ME SHUT- DOWN TI ME SETTI NG

Step 1: Press MENU to enter the menu selection.

Step 2: Press PLAY to select the "OFF TIME" option.

Step 3: Press PLAY to select the shut-off time.

There are 4 levels to choose from.

30 MIN （Shut-down after 30 minutes）

60 MIN (Shut-down after 60 minutes)

90 MIN (Shut-down after 90 minutes)

OFF （Cancel automatic shut-down）

Downloaded from www.Manualslib.com manuals search engine

4. 6 CONTRAST

Step 1: Press MENU to enter the menu selection.

Step 2: Press PLAY to select the "CONTRAST" option.

Step 3: Press PLAY to select the contrast level you prefer.

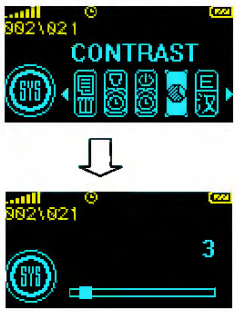

There are 16 levels to choose from.

4. 7 LANGUAGE

Step 1: Press MENU to enter the menu selection.

Step 2: Press PLAY to select the "LANGUAGE" option.

Step 3: Press PLAY to select the display language.

There are three modes to choose from:

1. 中文简体
2. 中文繁體
3. ENGLISH

4. 8 VERSI ON

Step 1: Press MENU to enter the menu selection.

Step 2: Press PLAY to select "VERSION" to see the version.

Note: The version of the software refers to the machine.

4. 9 SN

Step 1: Press MENU to enter the menu selection.

Step 2: Press PLAY to select the "SN" option to see the serial

Downloaded from www.Manualslib.com manuals search engine

number.

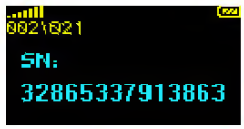

Note: The SN of the software refers to the machine.

4. 10 UPGRADE

Step 1: Press MENU to enter the menu selection.

Step 2: Press PLAY to select the "UPGRADE" option.

Note: Select " UPGRADE" before connecting with PC..

4. 11 FORMAT

Step 1: Press MENU to enter the menu selection.

Step 2: Press PLAY to select the "FORMAT" option.

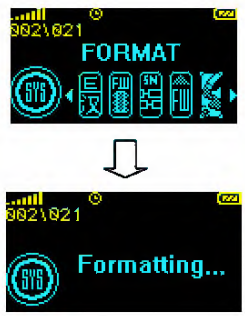

Note: All files in the player's memory will be deleted.

4. 12 DEFAULTS

Step 1: Press MENU to enter the menu selection.

Step 2: Press PLAY to select the "DEFAULTS" option.

SAFTY

1、Using this product for extended periods of time on high volume may result in temporary or permanent hearing loss.

2、Do not dismantle or install this product by yourself.

3、Because this product contains an internal battery, please do not put the product near flames or high temperatures; this may damage the battery, or cause it to explode.

4、Do not use the headphones while driving, biking, or operating any motorized vehicle. Doing so may create a traffic hazard, and is illegal in some areas.

Downloaded from www.Manualslib.com manuals search engine

TROUBLE SHOOTING

Problem	Solution
Music is unable to be played and the characters displayed on the LCD are distorted	-- Please charge the player
Poor FM reception	--Plug the earphones in
Unable to record from the radio	-- Check whether the player's memory is full.
No sound is coming out of the earphones	--Check whether the audio files are in the system directory MUSIC / VOICE. --Check the volume level --Check to see if the earphones are inserted properly
Buttons do not work	--Check to see if the HOLD switch is ON (Switch to OFF position)
Failure to download files	--Check the connection between your computer and the player to ensure that the cable is secure. --Reinstall the player's PC software

SPECIFICATIONS

Model: F850
LCD: 132*64 dot size OLED
USB: USB1.1
FM radio: 76MHz~108 MHz

MP3 decoding:
Forms supported: MPEG 1/2/2.5 Layer 3
Sample frequency: 32, 44.1 and 48kHz & 16, 22.05 and 24kHz
Bit rate: 32 to 256kbps & 16 to 160kbps & 8kbps

WMA decoding:
Sample frequency: 32, 44.1 and 48kHz
Bit rate: 32 to 192 kbps

MP3 real-time encoding
Forms supported: MPEG 1/2/2.5 Layer 3
Sample frequency: 32, 44.1 and 48kHz & 16, 22.05 and 24kHz & 8KHz
Bit rate: 32 to 256kbps & 16 to 160kbps & 8kbps

Earphone Output: 6mw/6mw (L/R channel)
SNR: 80dB (Mp3 real-time encode)
Voice record duration: 1-35 hours
Battery: 440mA/H Li Battery
Dimension: Approx. 70*43*19 (mm) (w/h/d)

Downloaded from www.Manualslib.com manuals search engine

Beijing Huaqi Information Digital Technology Co.,Ltd
www.aigo.com

Downloaded from www.Manualslib.com manuals search engine